



INSTALLATION INSTRUCTIONS FOR PART 95-8904B

INSTALLATION INSTRUCTIONS FOR PART 95-8904B

APPLICATIONS SUBARU LEGACY & OUTBACK 2010 (non-NAV models)

95-8904B

KIT FEATURES



- DDIN radio provision
- ISO stacked provision
- Painted scratch resistant matte black

Note: Minor sub-dash modifications required. Part # 95-8903B does not require these modifications.



KIT COMPONENTS

- A) DDIN Trim Plate
- B) DDIN Brackets

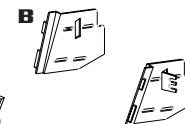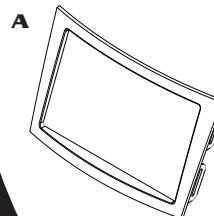


WIRING & ANTENNA CONNECTIONS (SOLD SEPARATELY)

- 70-8901 Subaru Harness 1990-UP
- 70-7552 Nissan Harness 2007-UP
- 40-SB10 Subaru Antenna Adapter 2005-UP

TOOLS REQUIRED

- Phillips Screwdriver
- Panel Removal Tool
- Utility Knife
- Small Flat Blade Screwdriver
- Hacksaw (or similar cutting tool)



METRA. THE WORLD'S BEST KITS.™



1-800-221-0932



metraonline.com

© COPYRIGHT 2004-2010 METRA ELECTRONICS CORPORATION

METRA. THE WORLD'S BEST KITS.™



1-800-221-0932



metraonline.com

© COPYRIGHT 2004-2010 METRA ELECTRONICS CORPORATION



95-8904B

NOTES

This image shows a single sheet of white paper with horizontal blue ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

- **2010 SUBARU LEGACY/OUTBACK**
- **DDIN / STACKED ISO HEAD UNIT PROVISION. . 2**

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.




mobile electronics
certification program

95-8904B DASH DISASSEMBLY

2010 SUBARU LEGACY / OUTBACK

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

- 1 Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2 Unclip and remove the radio trim panel including the a/c vents.
(Fig. A)
- 3 Remove (4) Phillips screws securing the factory radio.

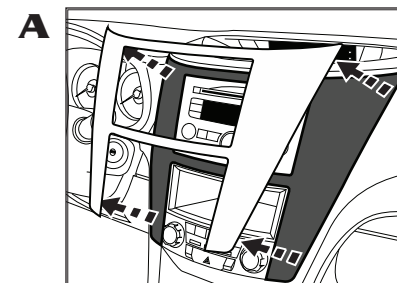

Continue to Kit Assembly

95-8904B KIT ASSEMBLY

95-8904B

2010 SUBARU LEGACY / OUTBACK DDIN / STACKED ISO HEAD UNIT PROVISION

NOTES

- 1** Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapters from Metra and AXCESS to integrate your new radio. Re-connect the negative battery terminal and test the unit for proper operation.
- 2** Attach the Double DIN brackets to the Double DIN trim plate. (Fig. A)
- 3** Slide the Double DIN head unit or stacked ISO head units into the bracket/radio housing assembly and secure the Double DIN head unit or stacked ISO head units to the assembly using the screws supplied with the radio. (Fig. B)
- 4** Using an air saw, hacksaw, or similar cutting tool, cut to the inside of the radio's lower mounting holes, through the plastic and metal bracket. (Cut on the inside of each hole as close to the hole as you can get. If cut properly you may reuse two bottom factory screws, if not use self tapping screws on the bottom.) (Fig. C)
- 5** Reassemble dash in reverse order of disassembly.

